

BRUKS- OG MONTERINGSANVISNING (NO)



Serie: Air Conditioner (A/C)

Denne bruks- og monteringsanvisningen gjelder for følgende modeller:

JC5000AIR

JC7000AIR

Les bruksanvisningen nøye. Bruk og vedlikehold må også være i henhold til bruksanvisningen. Spørsmål angående montering eller bruk av produktet kan rettes til importør.

Innhold

- Viktig sikkerhetsinformasjon..... 3
- Spesifikasjoner.....6
- Beskrivelse av produkt.....7
- Kontrollpanel.....9
- Montering.....11
- Bruk.....12
- Vedlikehold15
- Feilsøking16
- Garanti og avfallshåndtering.....17

Viktig sikkerhetsinformasjon

Vanlige sikkerhetsregler må alltid følges ved bruk av elektriske artikler, spesielt når barn er tilstede.

ADVARSEL! For å unngå elektrisk støt eller skader, pass alltid på at støpselet er trukket ut før produktet flyttes eller rengjøres.

- Les bruksanvisningen nøye
- Produktet er kun beregnet for hjemmebruk
- Sørg for at produktet kobles til vanlig strømnnett slik produktets merke viser
- Vær spesielt oppmerksom hvis produktet er i bruk hvor barn, handikappede eller eldre oppholder seg
- Påse at ledningen ligger på en slik måte at den ingen kan snuble i ledningen
- Produktet må ikke brukes hvis ledningen eller kontakten er skadet. Den må ikke brukes hvis den har falt i bakken eller er skadet på annen måte, slik at den ikke fungerer normalt
- Unngå å bruke skjøteledning, da en slik ledning kan bli overopphetet og muligens starte en brann
- Hvis ledningen blir skadet må denne bli reparert av fabrikanten eller av en fagperson for å unngå farlige situasjoner
- Ta aldri på produktet med våte hender, da det kan føre til elektrisk støt

- Produktet må ikke settes rett ved brennbart materiale av noe slag da det alltid kan være en fare for brann
- Produktet må være skrudd av og kontakten tatt ut før den blir flyttet på
- Ikke stikk fingre eller andre gjenstander inn i lufttuttaket på produktet
- Unngå overbelastning på strømmettet (kursen) hvor produktet er tilkoblet. Ta hensyn hvis annen elektrisk apparatur er koblet til samme strømuttak eller kurs
- Produktet kan ikke benyttes av barn under 8 år og personer med reduserte fysiske eller psykiske evner eller som mangler erfaring og kunnskap, om de ikke får tilsyn eller instruksjoner om bruk av apparatet på en sikker måte og forstår farene som er involvert.
- Barn skal ikke leke med produktet. Rengjøring og vedlikehold skal ikke utføres av barn uten tilsyn
- Barn under 3 år skal holdes unna produktet med mindre de har kontinuerlig tilsyn
- Barn i alderen 3 til 8 år kan kun slå AV/PÅ produktet, forutsatt at produktet er montert slik monteringsanvisningen viser, og barna har fått instruksjon eller tilsyn vedrørende bruk av produktet på en sikker måte og forstår farene som er involvert
- Dekk aldri til luftinntakene på produktet. Unngå en mulig brann ved å sørge for at produktets luftinntak ikke er sperret eller tildekket.

- Produktet brukes i rom med vanlige rette gulv og minimum 50 cm fra omkringliggende objekter
- Produktet skal ikke plasseres i nærheten av bensin, komfyrer, varmekilder eller annet brennbart materiale
- Skru ikke på og av produktet ved å sette i kontakten eller dra den ut
- Plasser ikke andre objekter på produktet
- Unngå å putte noe i luftinntaket og luftuttaket
- Bruk ikke insektspray eller andre brennbare artikler i nærheten av produktet
- Ikke sprut olje eller vann inn i produktet
- Vask ikke produktet med vann, men tørk av med en lett fuktig og myk klut
- Ikke vask produktet med kjemiske løsemidler som bensin og alkohol etc. Hvis produktet er skittent vennligst bruk naturlige vaske-midler

TA VARE PÅ DENNE BRUKSANVISNINGEN!

ALDRI BERØR MED VÅTE HENDER - ELLER DEKK TIL LUFTUTTAKET

Spesifikasjoner

Modell	JC5000AIR	JC7000AIR
Avkjølingskapasitet	5000 Btu/t	7000 Btu/t
Strømbruk (W)	785	785
Strømstyrke	220-240V~50Hz	220-240V~50Hz
Avfukting	0,5 l/t	0,7 l/t
Luftsirkulasjon	280 m3/t	290 m3/t
Lydstyrke (dB)	65	63
Energiklasse	A	A
EER	2,6	2,6
Weight (kg)	21	20,5
Passer romstørrelse	8-12 m2	12-15 m2



Før bruk

For å unngå skade på kjølesystemet må enheten stå i oppreist stilling i minimum 24 timer før den tas i bruk.





Pass på at luftinntak og luftuttak aldri er tildekket.

Enheden skal kun brukes på en horisontal overflate for å unngå av vann lekker ut.

Beskrivelse av produktet

Mill JC5000AIR:



1. Håndtak
2. Kontrollpanel
3. Utslipp kald luft
4. Hjul
5. Luftuttak
6. Luftinntak
7. Drenering for vanntømming
8. Fjernkontroll
9. Utslippsrør

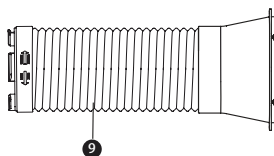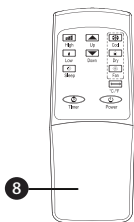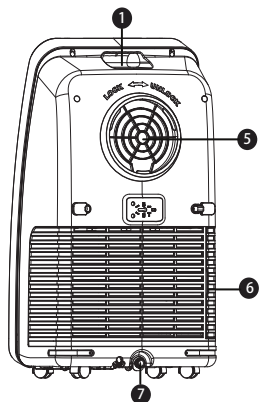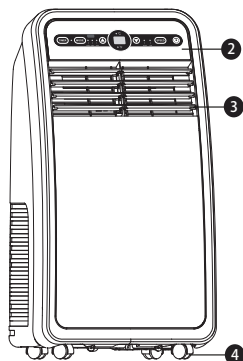

Beskrivelse av produktet


Mill JC7000AIR:

1. Utslipp kald luft
2. Kontrollpanel
3. Luftinntak
4. Utslippsrør
5. Hjul
6. Håndtak
7. Filter
8. Drenering for vanntømming
9. Ledning med plugg
10. Oppheng for ledning
11. Luftuttak

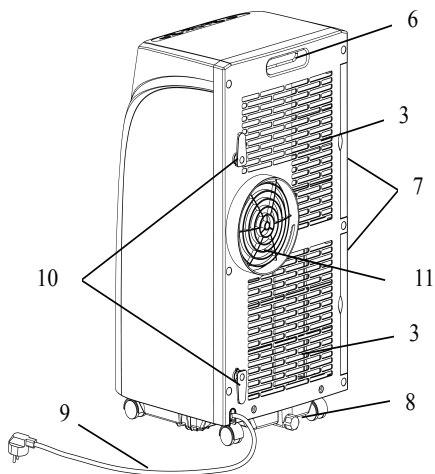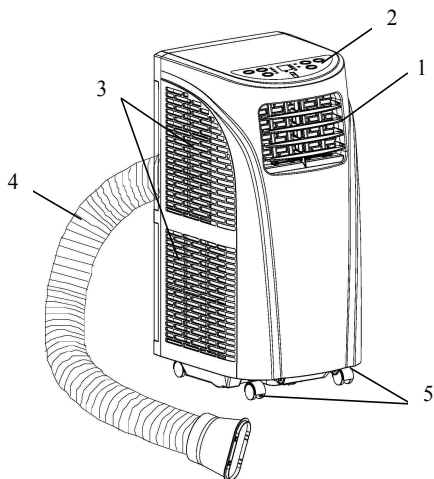

Kontrollpanel Mill JC5000AIR:


OBS! Hvis A/C slås på rett etter at den har blitt slått av i avkjølingsmodus vil det ta 3 minutter før den starter igjen automatisk.

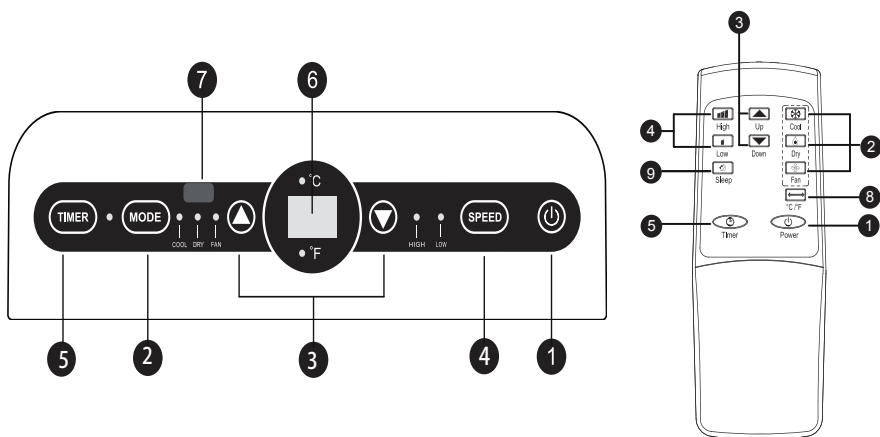

1. POWER: Trykk på knappen for å skru produktet PÅ og AV
2. MODE: Trykk på knappen og velg mellom modusene COOL (kald luft), DEHUMIDIFY (avfukting) og FAN (vifte). Indikatorlys er på når valgte modus er aktivert.
3. Pil OPP og NED: Hvis TIMER er på vil du kunne justere tiden med piltastene opp og ned. Er produktet i COOL (avkjøling) modus vil piltastene fungere til å justere temperaturen. Trykk på piltastene samtidig for å velge mellom Celsius og Fahrenheit.
4. SPEED: Trykk på denne knappen for å velge mellom HIGH (høy) eller LOW (Lav) hastighet på sirkulasjonen av kald luft.
5. TIMER: Trykk på knappen for å bruke timer funksjonen. Bruk piltastene til å justere tiden. For å endre tiden satt for timer, trykk en gang på timerknappen. Du vil da se tiden som er satt blinkende i displayet og du kan nå endre tid ved å bruke piltastene opp eller ned. Hvis du trykker på timerknappen enda en gang vil timeren bli avsluttet.
6. DISPLAY: Viser temperatur valgt og tid for timer.
7. Fjernkontrollmottaker: Dette vinduet tar imot instruksjonene fra fjernkontrollen.
8. C°/F°: Trykk på knappen for å velge mellom Celsius og Fahrenheit.
9. SLEEP: Trykk på denne knappen for å aktivere sovemodus. I denne modusen er viften satt til lav hastighet og kan ikke bli endret. Trykk på knappen igjen om du ønsker å avslutte sove-modus. Indikatorlys viser når produktet er i sovemodus.

Kontrollpanel Mill JC7000AIR:


OBS! Hvis A/C slås på rett etter at den har blitt slått av i avkjølingsmodus vil det ta 3 minutter før den starter igjen automatisk.

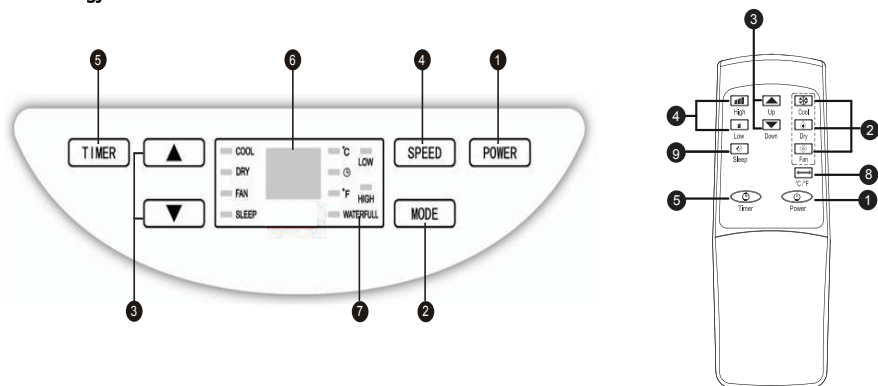


1. POWER: Trykk på knappen for å skru produktet PÅ og AV
2. MODE: Trykk på knappen og velg mellom modusene COOL (kald luft), DEHUMIDIFY (avfukting) og FAN (vifte). Indikatorlys er på når valgte modus er aktivert.
3. Pil OPP og NED: Hvis TIMER er på vil du kunne justere tiden med piltastene opp og ned. Er produktet i COOL (avkjøling) modus vil piltastene fungere til å justere temperaturen. Trykk på piltastene samtidig for å velge mellom Celsius og Fahrenheit.
4. SPEED: Trykk på denne knappen for å velge mellom HIGH (høy) eller LOW (Lav) hastighet på sirkulasjonen av kald luft. Indikatorlys vil vise hvilken hastighet som er aktivert.
5. TIMER: Trykk på knappen for å bruke timer funksjonen. Bruk piltastene til å justere tiden. For å endre tiden satt for timer, trykk en gang på timerknappen. Du vil da se tiden som er satt blinkende i displayet og du kan nå endre tid ved å bruke piltastene opp eller ned. Hvis du trykker på timerknappen enda en gang vil timeren bli avsluttet.
6. DISPLAY: I COOL (avkjøling) modus vises temperatur valgt. I FAN (vifte) og DEHUMIDIFIES (avfukting) modus vises romtemperatur.
7. WATER FULL: Indikatorlyset blinker når vannbeholderen er full og må tømmes..
8. C°/F°: Trykk på knappen for å velge mellom Celsius og Fahrenheit.
9. SLEEP: Trykk på denne knappen for å aktivere sovemodus. I denne modusen er viften satt til lav hastighet og kan ikke bli endret. Trykk på knappen igjen om du ønsker å avslutte sove-modus. Indikatorlys viser når produktet er i sovemodus.

Montering

Plasser produktet på et tørt sted med rette gulv og minimum 50 cm fra andre objekter.




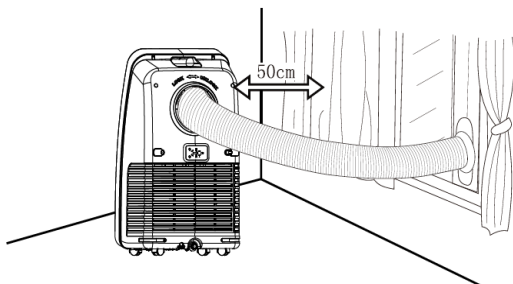


Monter utslippsrøret til air conditioneren ved å skru det (motsatt av klokken) på lufttuttaket på baksiden.

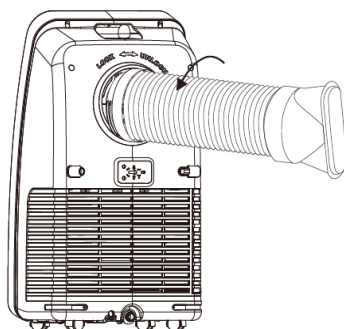

For å installere vindusforseilingen følg instruksjonene nedenfor:


1. Noter deg midten (M) av vindusseilet. Se figur 1.
2. Noter deg midten av vindusrammen og det åpne vinduet, se figur 2-4. Figur 2 viser et åpent svingvindu, figur 3 et veltevindu og figur 4 et takvindu.
3. Fest Velcro tapen til forsiden (ca. 1 cm bredde) av vindusrammen eller til innsiden av vindusrammen (hvor håndtaket er festet).
4. Fest først side A, og så side B, start i midten og fest så hele veien til høyre og venstre.
5. VIKTIG! Ved festing av seilet må punkt A plasseres direkte ovenfor punkt B.
6. Når vinduet lukkes vær sikker på at seilet ikke sitter fast mellom vindusrammen og vinduskarmen.
7. Åpne glidelåsen helst ved posisjonen markert med «S» og fest utslippsrøret i åpningen.

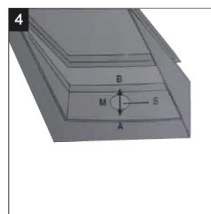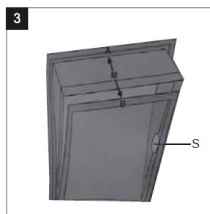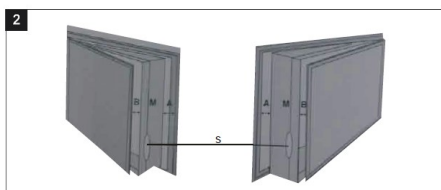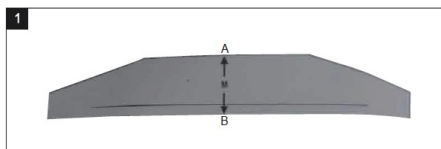


For skyvevinduer

Hvis du har skyvevinduer, kan du bestille vindusforsegling tilpasset dette på post@millheat.com

Fest enden av utslippsrøret inn i vindusforseglingsplaten. Juster åpningen av vinduet slik at den går kant i kant med vindusforseglingsplaten. Legden på platen er justerbar.

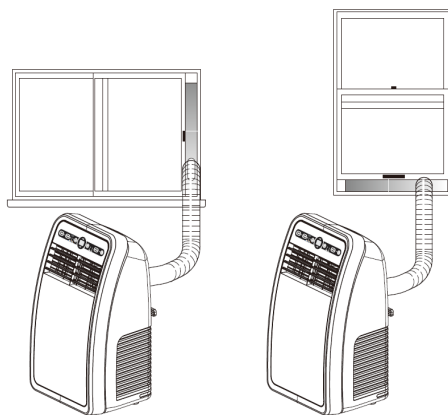

OBS! Unngå å bøye utslippsrøret betydelig, da dette kan påvirke effekten til produktet. Pass på at luften kan strømme uhindret gjennom utslippsrøret.

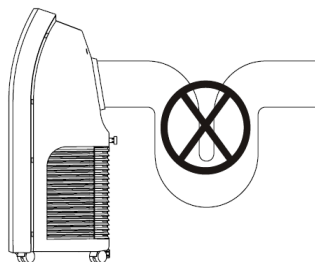

Dette utslippsrøret er laget spesielt for denne modellen. Dette betyr at du ikke kan bruke et annet utslippsrør og heller ikke skjøte på røret for å gjøre det lenger.

Maks lengde for utslippsrøret er 150 cm. Vi anbefaler å bruke minimumslengde for å spare strøm.

Bruk

Avkjølingsmodus

- Når A/C er i avkjølingsmodus vil indikatorlampen lyse.
- Bruk piltastene til å justere temperatur
- Trykk på SPEED-knappen for å velge mellom lav/høy hastighet


Viftemodus

- Trykk på MODE-knappen og velg vifte eller bruk FAN-knappen på fjernkontrollen for å aktivisere viften. Indikatorlampen lyser når viften er aktivisert.
- Trykk på SPEED-knappen for å velge mellom lav/høy hastighet
- Temperatur kan ikke bli justert

Avfuktingsmodus

- Trykk på MODE-knappen og velg avfuktingsmodus eller bruk DRY-knappen på fjernkontrollen. Indikatorlampen lyser når avfuktingsmodus er aktivisert.
- Fjern lokket til avfukterdreneringen og sett i vannslangen som medfølger (0,5 m). Plasser den andre enden av vannslangen i en bøtte/beholder eller lignende.
- Når A/C er satt i avfuktingsmodus vil den være PÅ så lenge temperaturen i rommet er ≥ 17 C°. Om romtemperaturen er ≤ 15 C° vil avfuktingsmodus automatisk skrus AV. Når romtemperaturen igjen øker til ≥ 17 C° vil avfuktingsfunksjonen slå seg på etter 3 min.
- I avfuktingsmodus vil viften være låst til lav hastighet og kan ikke justeres.
- Temperaturen kan ikke justeres i avfuktingsmodus.

OBS! Når avfuktingsmodus er aktivert anbefales det å fjerne utslippsrøret for at avfuktingsprosessen skal være mer effektiv.

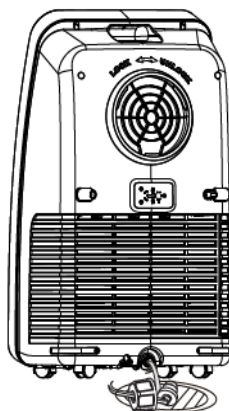

Timermodus

- Når produktet er i standby trykk på TIMER-knappen for å sette timer PÅ. Trykk på piltastene for å velge tiden (1-24 timer) du ønsker at A/C skal skru seg PÅ. Indikatorlampen lyser når timer funksjon er aktivisert.
- Når produktet er PÅ, trykk på TIMER-knappen for å sette tiden du ønsker at A/C skal skru seg AV automatisk. Trykk på piltastene for å velge tid (1-24 timer) du ønsker at A/C skal skru seg AV.
- For å endre tiden satt for timer, trykk en gang på timerknappen. Du vil da se tiden som er satt blinkende i displayet og du kan nå endre tid ved å bruke piltastene opp eller ned. Hvis du trykker på timerknappen enda en gang vil timeren bli avsluttet.



Vanntømming

Denne air conditioneren er utstyrt med et selvfordampende system som gjør at den avkjøles ved bruk av vannet som blir til overs. Dette gjør avkjølingen mer effektiv og er strømbesparende.

Hvis vannbeholderen likevel blir full vil dette vises i displayet, en alarm vil gå på og air conditioneren vil slå seg av automatisk for modellen JC7000AIR. For modellen JC5000AIR vil «FL» vises i displayet og air conditioneren vil slå seg av automatisk.

Tøm vannet for å få air conditioneren til å starte igjen automatisk. Du kan flytte air conditioneren til et sted du kan tømme vannet direkte i for eksempel et sluk, eller bruke vannslangen som følger med og en bøtte for å tømme vannet. Skru av mutteren og dra ut vannproppen for å tømme vannet. Sett inn igjen vannpropp og mutter før bruk.

Advarsel! Når vannbeholderen er full, vennligst flytt air conditioneren forsiktig slik at vannet ikke flommer over på innsiden av produktet.

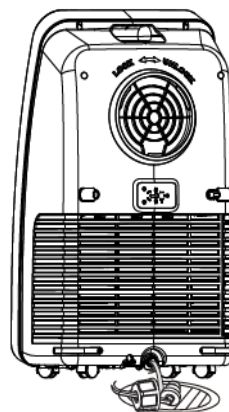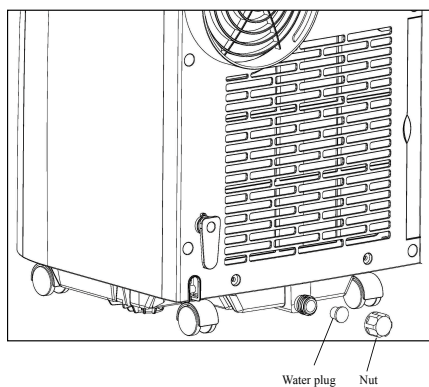

Vedlikehold

1. Ta alltid ut stikkontakten før rengjøring av air conditioneren
2. Tørk air conditioneren regelmessig med en lett fuktig klut og tørk overflaten før du skruer den på igjen


OBS! Air conditioneren må aldri legges i vann.

Unngå bruk av vaskemidler ved renhold.


Det må aldri komme vann inn i air conditioneren da dette kan medføre fare.

3. Vask filteret hver annen uke for å unngå at støv hindrer air conditionerens effektivitet.
4. Dra ut filterene som vist på illustrasjonene nedenfor (1 filter for JC5000AIR og 4 filter for JC7000AIR).
5. Putt filterene i varmt vann (ca. 40 C°). Tørkes etterpå i skyggen.
6. Pass på at filterene er helt tørre før du putter de inn igjen på samme måte som de var plassert før du tok de ut.

OBS! Gjelder for modellen JC7000AIR; start med å ta ut filter 1 og deretter filter 2. Når du skal sette inn igjen filterene; start med å sette inn filter 2 og deretter filter 1.

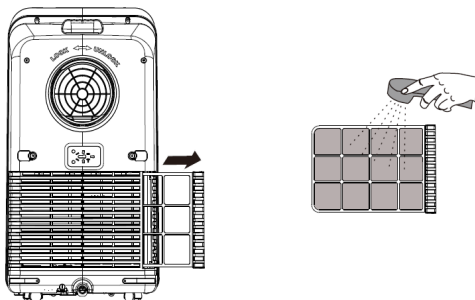

JC5000AIR

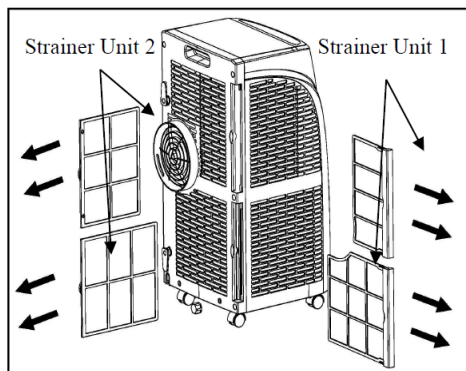

JC7000AIR

Sesongrengjøring

Hvis A/C ikke skal være i bruk over en lang periode:

- 1. Dra ut vannproppen og tøm vannet.
- 2. Sett A/C i viftemodus i 2 timer for å tørke den innvendig.
- 3. Skru av A/C og dra ut kontakten
- 4. Vask filtrene og la de tørke før du setter de inn igjen i A/C.
- 5. Skru av lufrøret og oppbevar det trygt.
- 6. Dekk til A/C med en plastikkpose og plasser den på et tørt sted.

Feilsøking

Feilkode	Betydningen av feilkode
E1	Feil på temperatursensoren ved kompressoren
E2	Feil på temperatursensoren i rommet
E4	Frostsikring: temperaturen i lufrøret er for lav og A/C vil skru seg av. Når temperaturen stiger til 8 C° vil frostsikringen slå seg av og A/C vil operere som normalt igjen.

Problem	Årsak	Løsning
A/C fungerer ikke	Støpselet er ikke plugget i stikkkontakten	Sett støpselet i stikkkontakten
	”FL” vises i displayet	Vanntanken er full. Tøm vannet og A/C vil virke som normalt igjen.
	A/C er skrudd AV.	A/C kan starte igjen 3 minutter etter den har blitt slått av.
Avkjøling (COOL) modus fungerer ikke normalt	Direkte sollys	Trekk for gardiner
	Dør og vinduer står åpne eller det er varmekilde på i rommet.	Lukk igjen dører og vindu. Slå av varmekilde.
	Filteret er skittent og tett av støv	Vask filterene og tørk de før de settes inn igjen.
	Luftinntak eller luftuttak er blokkert	Fjern blokkeringen
A/C lager høy lyd	A/C er plassert på et ujevnt underlag.	Plasser A/C på et jevnt underlag for å forebygge risting.

Garanti

Garantien gjelder i 2 år. I denne tiden vil produktet bli reparert eller erstattet om feil skulle oppstå. Forutsetningen er at produktet er brukt i henhold til denne bruksanvisningen og fremlegging av kjøpskvittering. Skulle det oppstå feil med produktet, ta kontakt med butikken der den ble kjøpt eller med importøren.

Avfallshåndtering

Symbolet  angir at dette produktet ikke skal kastes sammen med vanlig husholdningsavfall. For å hindre mulig skade på miljø eller helse, må dette produktet leveres til resirkulering av elektrisk og elektronisk utstyr. Din lokale el. forretning eller miljøstasjon har en ordning for å ivareta en miljøriktig destruksjon og resirkulering av slike produkter.

Ved reklamasjon må serienummer og original kvittering forelegges.

Ved eventuell reklamasjon, spørsmål om produktet eller reservedeler, kontakt forhandler eller Mill International AS



Mill International AS

Grini Næringspark 10

1361 Østerås

Tlf: +47 22 13 32 00

post@millclimate.com / post@millheat.com

facebook.com/millheat

millclimate.com / millheat.com

ASSEMBLY AND INSTRUCTION MANUAL (EN)



Series: Air Conditioner (A/C)

This assembly and instruction manual applies to the following models:

JC5000AIR

JC7000AIR

Read the instructions carefully. Use and maintenance must also be in accordance with the instructions. Questions related to installation or use of the product should be addressed to the importer.

Table of contents

Important safety information 3

Specifications 6

Description of the product..... 7

Control panel..... 9

Mounting..... 11

Usage..... 12

Maintenance..... 15

Troubleshooting..... 16

Warranty and waste management..... 17

Important safety information

You must follow standard safety guidelines when using electrical products, especially in the presence of children.

WARNING! To avoid electric shock or damage, always make sure that the plug is disconnected before the product is moved or cleaned.

- Read the instructions carefully.
- Make sure the product is connected to regular mains, as indicated on the product label.
- Be particularly careful if the product is used in the presence of children, the handicapped or elderly.
- Make sure the cord is situated so that nobody can trip on it.
- The product must not be used if either the cord or plug is damaged. The product must not be used if it has been dropped on the floor or is damaged in any other way which causes it to malfunction.
- Avoid using extension cords, as such a cord may become overheated and possibly start a fire.
- If the cord is damaged, it must be repaired by the manufacturer or by an authorized technician to avoid dangerous situations.
- Never touch the product with wet hands, as this may cause electric shock.
- The product should not be installed in close proximity to flammable materials of any kind as this will result in the risk of fire.

- The product must be switched off and the plug must be disconnected before the product is moved.
- Do not insert your fingers or other objects into the air outlet of the product.
- Avoid overloading the mains (the circuit) where the product is connected. Pay attention if other electrical apparatus are connected to the same power outlet or circuit.
- The product cannot be used by children under 8 years of age and persons with reduced physical or mental abilities or who lack experience and knowledge of the product, unless they are given supervision or instruction in the safe use of the device and understand the hazards involved.
- Children should not play with the device. Cleaning and maintenance should not be performed by children without supervision.
- Children under 3 years of age should be kept away from the device, unless under continuous supervision.
- Children aged 3 to 8 years are only permitted to turn the device ON/OFF, assuming the device is assembled according to the assembly instructions and the children have received instruction or supervision in the safe use of the product and understand the hazards involved.
- Never cover the air vents on the product. Avoid potential fire hazards by making sure the air intakes are not blocked or covered.

- The product should be used in rooms with normal flat floors and minimum 50 cm away from surrounding objects
- The product should not be placed in close proximity to gasoline, stove, heating sources or other flammable material
- Do not turn the product ON/OFF by plugging/unplugging the heater
- Do not place other objects on the product
- Avoid putting objects into the air intake/outtake
- Do not use spraying agent and other solvent or flammable substances near the product
- Do not splash oil or water into the product
- Do not clean the product with water, but wipe with semi-wet soft cloth
- Do not wipe the product with chemical solvents such as benzene, gasoline and alcohol, etc. If the product is dirty, please scrub with neutral detergents

KEEP THIS INSTRUCTION MANUAL FOR FUTURE USE!

NEVER TOUCH THE PRODUCT WITH WET HANDS OR COVER THE AIR OUTLET

Specifications

Model	JC5000AIR	JC7000AIR
Cooling capacity	5000 Btu/h	7000 Btu/h
Power (W)	785	785
Voltage	220-240V~50Hz	220-240V~50Hz
Dehumidifying	0,5 l/h	0,7 l/h
Air circulations	280 m ³ /h	290 m ³ /h
Noise (dB)	65	63 dB
Energy class	A	A
EER	2,6	2,6
Weight (kg)	21	20,5
Recommended room size	8-12 m ²	12-15 m ²



Before use

To avoid damage on the cooling system, place the unit in an upright position for at least 24 hours before using the air conditioner.





Make sure the air outlet and air intake are never blocked.

Only operate the unit on a horizontal surface to ensure no water leaks out.

Description of product

Mill JC5000AIR:



1. Handle
2. Control panel
3. Cooling emission
4. Casters
5. Air outlet
6. Air intake
7. Drainage outlet
8. Remote control
9. Exhaust pipe

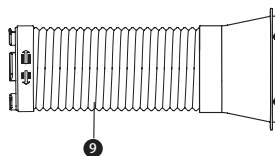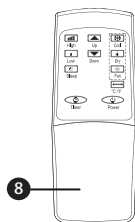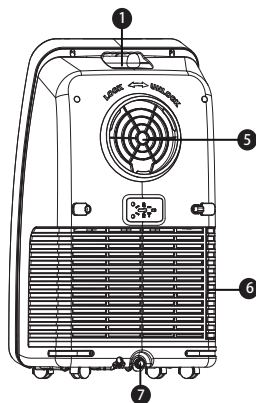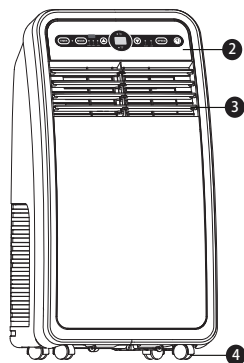

Description of product


Mill JC7000AIR:

1. Cooling emission
2. Control panel
3. Air intake
4. Exhaust pipe
5. Casters
6. Handle
7. Filter/Strainer
8. Drainage outlet
9. Power cord with plug
10. Buckle for power cord
11. Air outlet

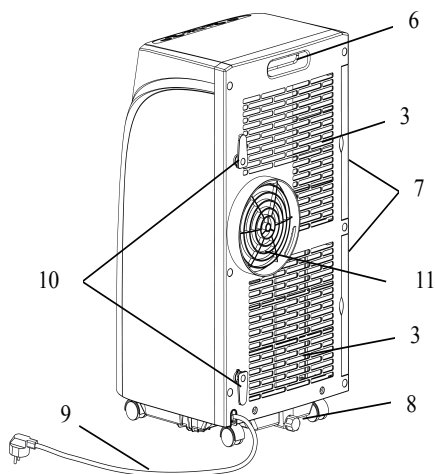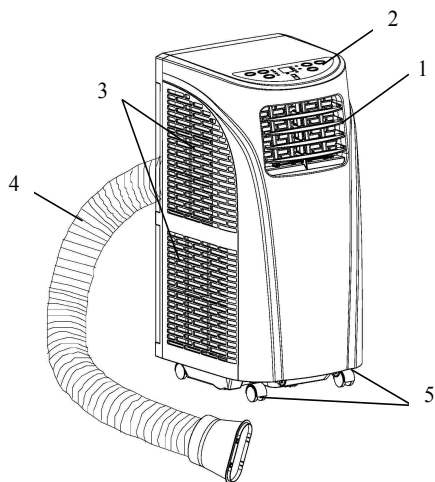

Control panel Mill JC5000AIR:


Attention! If the air conditioner is restarted immediately after shutdown in COOL mode, 3 min protection time is necessary before automatic start.

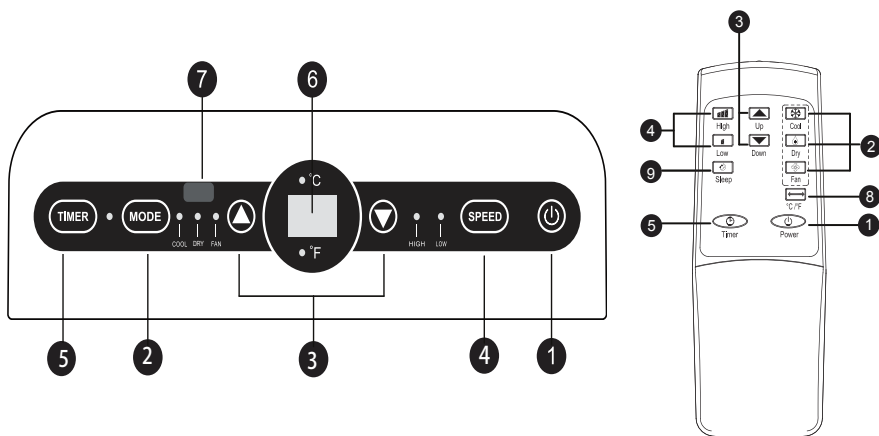

1. **POWER:** Press this button to turn the A/C ON/OFF.
2. **MODE:** Press this button to choose COOL mode, dehumidification DRY mode or FAN mode. Indication light is on when mode is activated.
3. **Temperature/time adjusting key:** Press the arrows to adjust the temperature when in cooling mode. In timer mode use the arrows to adjust ON/OFF time. Press UP and DOWN arrow simultaneously to switch between Fahrenheit and Celsius.
4. **SPEED:** Press this button to choose high/low wind speed.
5. **TIMER:** Press this button to enter timer setting state. The indicator light is on when timer is activated. Use the arrows up and down to adjust the time. To change the time set, press one time on the timer button. You will then see the time set blinking in the display and you can now change the time by using the arrows up and down. If you press the timer button once again, the timer will be deactivated.
6. **DISPLAY:** Shows temperature and time set.
7. **Remote control receiver:** This window is used to receive signal of remote controller.
8. **C°/F°:** Press this button to switch between Celsius and Fahrenheit.
9. **SLEEP:** In cooling mode, press sleep key on remote controller to choose sleep mode.

Control panel Mill JC7000AIR:


Attention! If the air conditioner is restarted immediately after shutdown in COOL mode, 3 min protection time is necessary before automatic start.

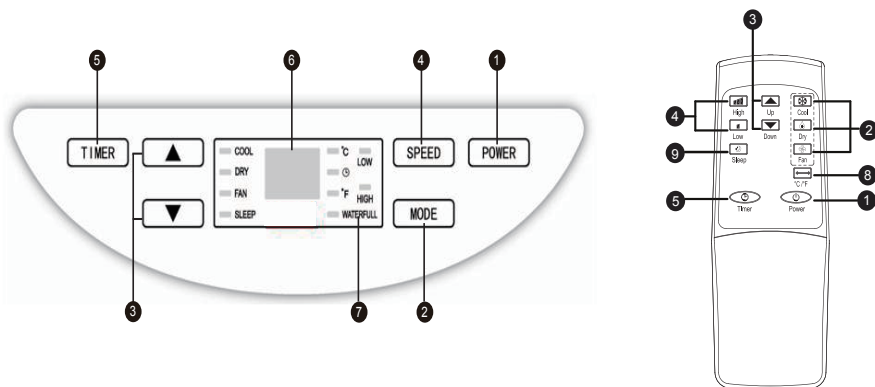


1. **POWER:** Press this button to turn the product ON/OFF
2. **MODE:** Press this button to select COOL, DRY (dehumidify) and fan mode. The indicator lamp is activated when the mode is selected.
3. **Temperature/time adjusting key:** If TIMER is on you can adjust the time with arrows UP and DOWN. If the product is in COOL mode you can use the arrows to adjust the temperature. Press the arrows simultaneously to select between Celsius and Fahrenheit.
4. **SPEED:** Press this button to select LOW or HIGH speed of the wind. The indicator light will be activated when speed is selected.
5. **TIMER:** Press this button to enter timer setting state. The indicator light is on when timer is activated. Use the arrows up and down to adjust the time. To change the time set, press one time on the timer button. You will then see the time set blinking in the display and you can now change the time by using the arrows up and down. If you press the timer button once again, the timer will be deactivated.
6. **DISPLAY:** Shows the set temperature in COOL mode. Shows room temperature in FAN mode and DRY (dehumidification) mode.
7. **WATER FULL:** In water full state the indicator lamp flickers with buzzer to prompt drainage.
8. **C°/F°:** Press this button to switch between Celsius and Fahrenheit.
9. **SLEEP:** Press this button to activate SLEEP mode. In this mode the is fixed to low speed.

Mounting

Place the product at a dry place with straight floors and minimum 50 cm from surrounding objects.



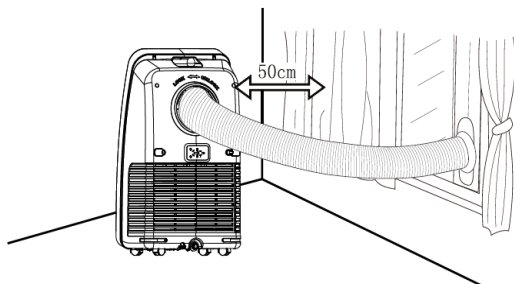


Mount the exhaust pipe by screwing (anticlockwise) it on the air outlet at the back of the A/C.

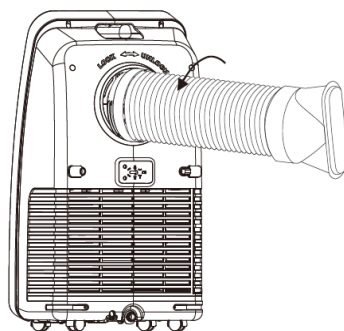

For installing the window seal please follow the instructions below:


1. Mark the middle (M) of the window seal. See figure 1.
2. Mark the middle of the window frame and the casement, see figure 2-4. Figure 2 shows an open window, figure 3 a tilted window and figure 4 an open skylight.
3. Stick the Velcro tape to the front side (in most cases 1 cm wide) of the casement or to the inner surface of the casement (where the window handle is attached).
4. First fasten side A, then side B, starting in the middle and working all the way to the left and right.
5. **IMPORTANT!** When fastening, point A must be exactly opposite point B.
6. When closing the window take care that the seal is not jammed between the casement and window frame.
7. Open the zip preferably at the positions makes with «S» and attach the air hose.

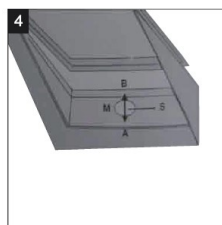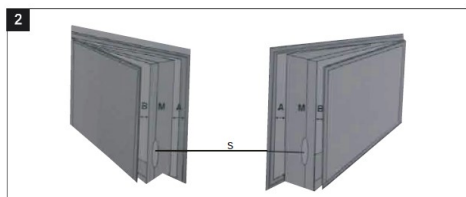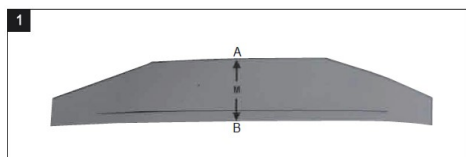


For sliding windows

If you have sliding windows you can order a window kit specialised for this at post@millheat.com

Mount the end of the air pipe to the window sealing plate. Adjust the opening width of the window so that it can match the sealing plate properly. Length of the sealing plate is adjustable.

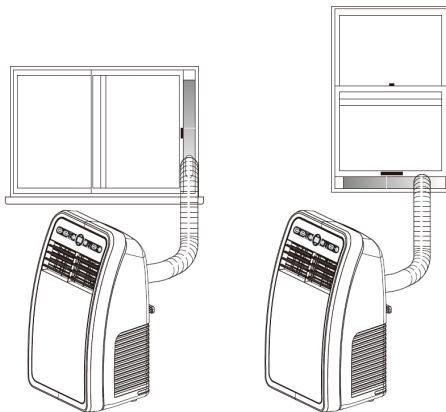

Warning! Avoid bending the air pipe severely as this can effect the efficiency of the product. Make sure the air can flow freely through the air pipe.

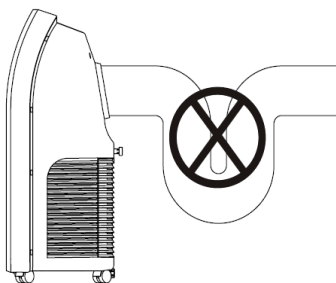

This air pipe is designed especially for this model. Do not replace it or lengthen it.

Maximum length is 150 cm. We recommend using minimum length to save electricity.

Usage

Cooling mode

- When the A/C is in cooling mode the indicator light will be activated.
- Use the arrows UP and DOWN to adjust the temperature
- Press the SPEED button to choose between LOW/HIGH speed.


Fan mode

- Press the MODE button and choose fan or use the FAN button on the remote control to activate the fan. The indicator light is activated when the fan is in use.
- Press the SPEED button to select low/high speed.
- Temperature cannot be adjusted in fan mode.

Dehumidifier mode

- Press the MODE button and select dehumidifier mode or use the DRY button on the remote control. The indicator light will be activated.
- Remove the plug in the drainage and mount the supplied water hose (0,5 m). Place the other end of the water hose in a bucket/container or similar.
- When the A/C is set to dehumidifier mode it will be ON as long as the temperature in the room is $\geq 17^{\circ}\text{C}$. If the room temperature drops to $\leq 15^{\circ}\text{C}$ the dehumidifier mode will switch OFF automatically. When the room temperature again increases to $\geq 17^{\circ}\text{C}$ the dehumidifier mode will start again after 3 min.
- In dehumidifier mode the fan will be locked in low speed and cannot be adjusted.
- Temperature can not be set in dehumidifier mode.

Attention! When dehumidification mode is activated it is recommended to remove the exhaust pipe for the dehumidifying process to be more efficient.

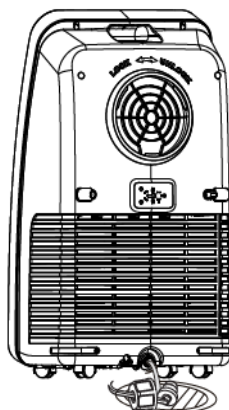

Timer mode

- When the A/C is in standby mode, press the TIMER button to activate timer ON. Use the arrows to select the time (1-24 hours) you wish the A/C to turn ON automatically. Indicator lamp is lit when the timer function is activated.
- When the A/C is ON, press the TIMER button to set the time you wish the A/C to turn OFF automatically. Press the arrows to select the time (1-24 timer) you wish the A/C to turn OFF.
- To change the time set, press one time on the timer button. You will then see the time set blinking in the display and you can now change the time by using the arrows up and down. If you press the timer button once again, the timer will be deactivated.


Water draining

This A/C is equipped with a self-evaporative system which means it uses most of the excess water to cool itself down. This makes the cooling solution more efficient and energy saving.

If however the water container is full, this will be visible in the display, an alarm will go off and the A/C will switch off automatically for model JC7000AIR. For model JC5000AIR «FL» will be visible in the display and the A/C will switch off automatically.

Empty the water to make the A/C start again automatically. You can move the A/C to a place suitable for emptying the water directly in a drainage or use the supplied water hose and a bucket to remove the water. Unscrew the nut and pull out the water plug to drain the water. Replace the water plug and nut before use.

Warning! When the water container is full, please move the A/C carefully to avoid water overflowing inside.

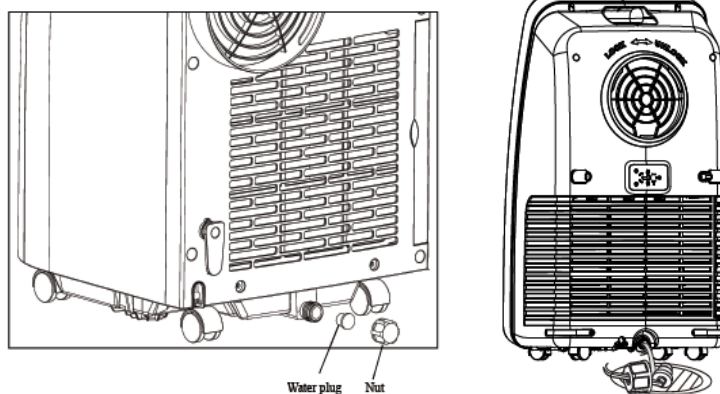

Maintenance

1. Always unplug the A/C before cleaning.
2. Wipe the A/C regularly with a semi-dry cloth and dry the surface before switching the product on.


CAUTION! The A/C should never be immersed in water

Avoid using detergents to clean the product.


Never let any water get inside the A/C; this can be hazardous.

3. Clean the filters every other week to avoid dust and dirt preventing the A/C to work properly.
4. Pull out the filters on the backside of the A/C (1 filter for JC5000AIR and 4 filters for JC7000AIR).
5. Put the filters in warm water (ca. 40 C°). Do not dry in direct sunlight.
6. Make sure the filters are completely dry before you replace them in the same way they were before you took them out.

Attention! Applies to model JC7000AIR; first take out strainer/filter 1 and then filter/strainer 2. When replacing the filters; start with replacing filter/strainer 2 and thereafter filter/strainer 1.

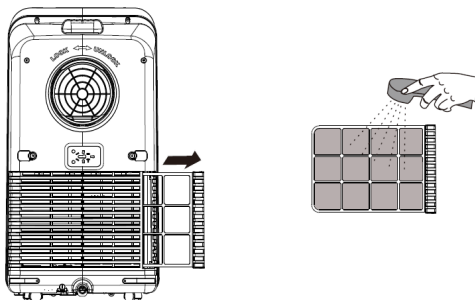

JC5000AIR

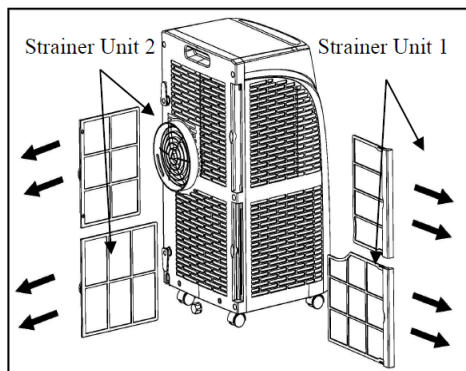

JC7000AIR

Seasonal maintenance

If the A/C is not going to be used for a longer period:

1. Pull out the water plug and drain the water
2. Set A/C in fan mode for 2 hours to dry inside.
3. Switch off the A/C and pull out the plug.
4. Clean the filters and let them dry before you replace them in the A/C.
5. Dismantle the air pipe and keep it properly.
6. Cover the A/C with a plastic bag and place it in a dry place.

Troubleshooting

Error code	Meaning of error code
E1	Error on the coil's temperature sensor
E2	Error on the temperature sensor in the room
E4	Anti-freezing protection: temperature in the air pipe is too low and the A/C will automatically switch off. When temperature increases to 8 C° the A/C will start working again.

Problem	Cause	Solution
A/C not working	Plug is not plugged in electric socket	Plug in electric socket
	"FL" is visible in the display	Water is full. Empty water and the A/C will start working again as normal.
	A/C is switched off	A/C can be started again 3 min after it has been switched off.
Cooling mode is not working properly	Direct sunlight	Pull the curtains
	Doors and windows are open, or heating source is on in the room.	Close doors and windows and switch off heating source.
	Filter is dirty and blocked with dust	Clean the filters and replace them after drying.
	Air intake or air outtake is blocked	Remove the blocking
A/C makes a lot of noise	A/C is placed on an uneven surface	Place the A/C on an even surface to avoid shaking.

Warranty

The warranty is valid for 2 years. The product will be repaired or replaced during this time should any malfunctions occur. The warranty applies if the product is used according to these instructions and the customer can present a purchase receipt. In case of any product failures, please contact the store where it was purchased or the importer.

Waste disposal

The icon  indicates that this product is not to be disposed of together with household waste.. This product must be delivered to a recycling service for electrical appliances and electronic equipment. This is done to avoid health risks and prevent harm to the environment. Your local utility, business or environmental centre has an arrangement to ensure the environmentally correct disposal and recycling of such products.

When submitting a claim, you have to provide the series number for your product and present the original receipt.

In case of claims or questions about the product or spare parts, contact your retailer or Mill International AS



Mill International AS

Grini Næringspark 10

1361 Østerås

Tlf: +47 22 13 32 00

post@millclimate.com / post@millheat.com

facebook.com/millheat

millclimate.com / millheat.com