



# Installation Guide

## 1 Pull the Shackle to Open

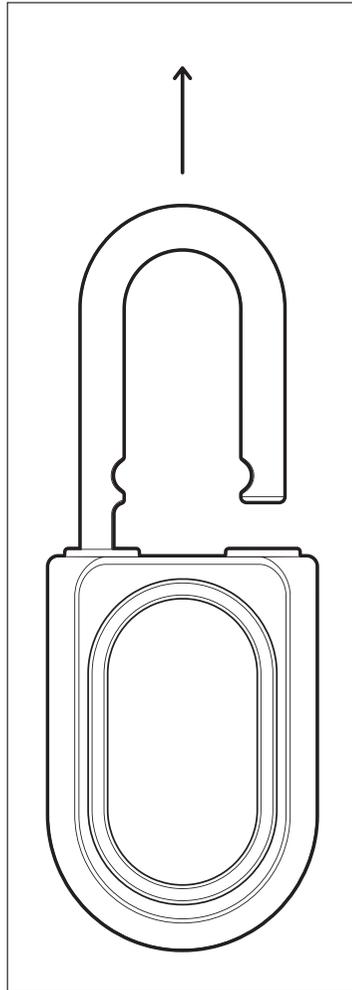

Padlock must be unlocked. Pull the shackle to the 'open' position.


## 2 Remove the Rubber Cover and the Screw

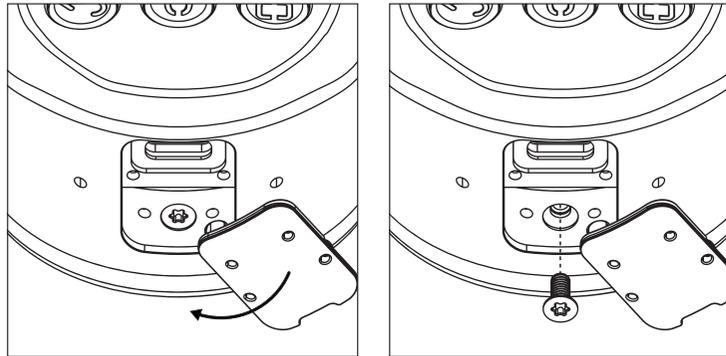

Pull out the rubber cover at the bottom of the padlock, and remove the screw using the provided screwdriver.

Do not lose the screw! Replacement screws are not available. Not using this screw could result in security issues.


## 3 Release the Torx Screw

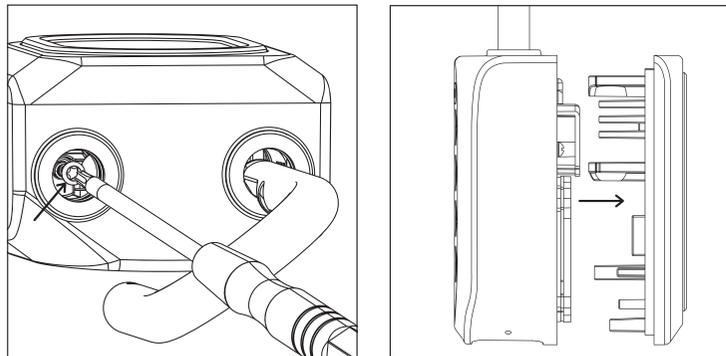


Release the Torx screw located below the shackle on the inside of the Padlock and remove the back cover.

 **Turn the screw anticlockwise 5 times till it pops up. The screw will be retained in the lock.**

## 4 Pull out the Retaining Pin

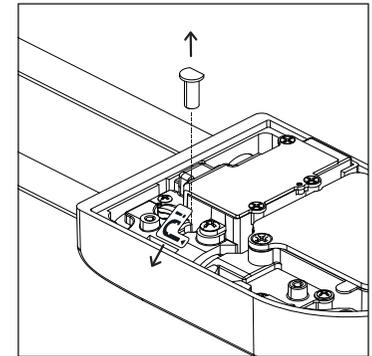


Remove the sticker and pull out the retaining pin.

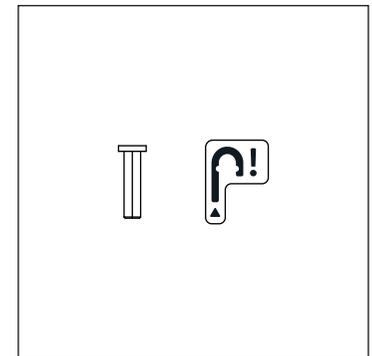

 **Keep both parts safe as no replacements are available!**


# Installation Guide

## 5 Insert the Long Shackle

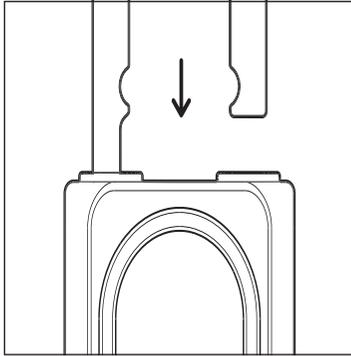


Insert the long shackle in the appropriate orientation.

## 6 Insert the Back Cover

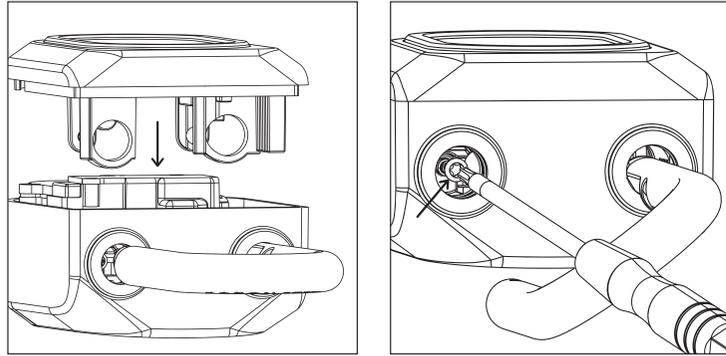


Insert the back cover and tighten the Torx screw located below the shackle on the inside of the Padlock.

## 8 Push the Shackle to Close

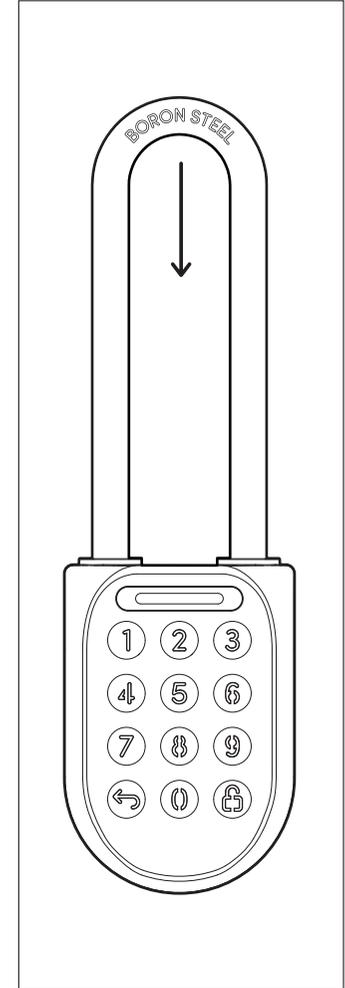


Push the shackle to 'close' position for the Padlock to automatically lock.

## 7 Insert the Screw and the Rubber Cover

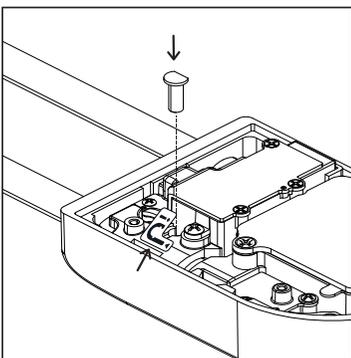

Re-insert the retaining pin and re-apply the sticker

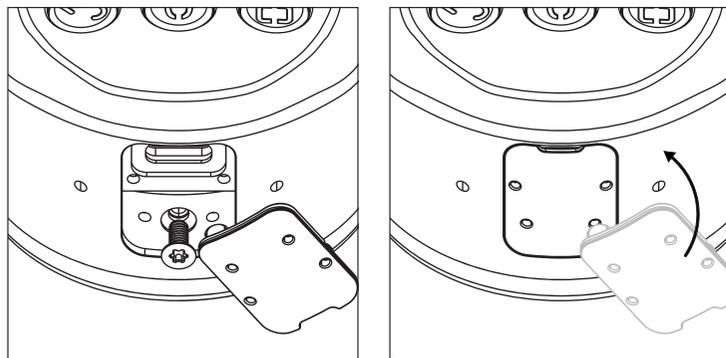

Tighten the Torx screw at the bottom of the Padlock and plug the rubber cover into place.